


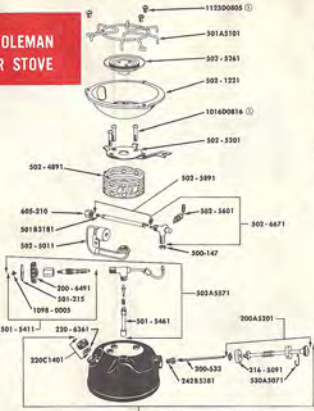

PARTS LIST FOR COLEMAN 502-700 SPORTSTER STOVE

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
200-533	Air Stem	502-1651	Fount (Complete)
200-6491	Valve Wheel	502-4891	Collar Assembly
200A5201	Pump Plunger (Complete)	502-5011	Burner (Complete)
216-5091	Pump Cap (Leather)	502-5281	Burner Support
220-6361	Gasket and Disc (Filter Cap)	502A571	Shut-Off Valve Assembly (Complete)
220C1401	Filter Cap (Complete)	502-5001	Stem Assembly (Regulator)
242B5361	Check Valve	502-5001	Generator
500-147	Lock Nut	502-6871	Regulator Assembly
501-215	Direction Disc	330A5071	Pump Cap Clip
501-5411	Valve Stem Assembly (Complete)	605-210	Jamb Nut
501-5461	Feed Tube Assembly	101B0816	Screw (Burner Support)
501A5101	Grate Assembly, with Screws	1058-0005	Screw (Valve Wheel)
501B3161	Gas Tip	1123D005	Screw (Grate)
502-1221	Burner Bowl	1131D008	Screw (Burner)



COLEMAN STOVE AND LANTERN FUEL, especially blended for top performance and

longer burning time in Coleman products. Burns cleanly—no soot, smoke, or odor. Contains rust and gum inhibitors which protect against clogging, rust, and corrosion. Available in quart and gallon sizes in reusable, leak-proof cans with built-in pouring spout. Does not deteriorate in the can.



WORLD-FAMOUS COLEMAN LANTERNS

A Coleman lantern stretches days to give more hours of just fuel hunting, fishing, camping, or vacationing. It's a life saver for use during emergencies. It keeps campfires bright as day. Floods a 100-foot area with strong light, bright as a 300-watt electric bulb, and keeps burning until morning oil on a few cents worth of fuel. It's wind-proof, storm-proof, bug-proof. Available in one- and two-mantle models.

See your Coleman Dealer for Repair Parts

YOUR COLEMAN GUARANTEE

All new models of Coleman Outing Products are guaranteed against faulty material or workmanship.

Any part found defective because of imperfect material or workmanship will be replaced without charge when returned with transportation charges prepaid to the Coleman factory, or to the nearest Coleman authorized in-warranty service station.

This guarantee does not, of course, apply to generators on stoves and lanterns, nor to any product where it is evident that damage has developed from improper handling or operation.

NOTICE: The use of any attachment or device that is not expressly approved by The Coleman Company, Inc. to alter or affect the operation of the appliance automatically cancels all warranties, implied or expressed. Furthermore, the Company shall not be liable for any consequences that result from the use of repair parts under these circumstances.

Coleman's warranty on repair parts is made null and void by their use on other than Coleman[®] manufactured appliances. Coleman's warranty on Coleman[®] appliances is made null and void by the use of other than genuine Coleman[®] repair parts. Always look for this Coleman[®] label.

Made in United States of America

THE COLEMAN COMPANY, INC.

General Office and Factory: Wichita, Kansas, U.S.A. 67201
Canadian Office and Factory: Toronto, Canada

Form No. 1960A011 5-65

Litho in U.S.A.

HOW TO USE AND ENJOY YOUR NEW



502-700 SPORTSTER STOVE

ALWAYS USE THE RIGHT KIND OF FUEL

The length of service you get from your stove and generator depends greatly upon the kind of fuel you use. Substances in gasoline that do not vaporize will stop up and shorten the life of your generator.

Use only Coleman Stove and Lantern Fuel or clean "white" gasoline; never use fuel containing lead compounds or lubricating oils. Store your fuel in a clean, closed metal container. (Glass containers are dangerous—may break.) If Coleman Stove and Lantern Fuel or ordinary "white" gasoline is not available at your favorite service station, most oil companies will gladly tell you where to obtain it.



TO PUMP AIR PRESSURE INTO FOUNT

Shut-off valve and filter cap must be closed. Turn pump plunger knob two complete turns to the left. Place thumb over small hole in knob and pump 20 to 25 full strokes. Turn pump plunger knob to the right and tighten firmly with fingers. Air may be added while stove is lighted or in operation without closing shut-off valve.



COOK KIT HANDLE ONLY, 501-4051



501-960 COOK KIT

ALUMINUM CASE for Sportster. Lightweight, corrosion resistant, has detachable handle. Lid is 6" by pan. Bottom—two-quart sauce pan. Buy it from your Coleman dealer!

502-952 HEAT DRUM

HEAT DRUM designed for the Sportster Stove. Perfect for heating duck blinds, fishing cabins, tents, etc. Buy it from your Coleman dealer!

TO FILL FOUNT

Close shut-off valve (1) by turning valve wheel to the right. Unscrew filler cap (2). With stove in level position, fill with clean, fresh fuel. Fount holds approximately one pint. Replace filler cap and tighten firmly with fingers. Never remove filler cap while the stove is lighted or near flame or excessive heat.

 


TO LIGHT STOVE

1. Rotate cleaner-regulator lever (3) several times to be sure tip is clean. Leave lever pointing away from stove to avoid flooding while lighting.
2. Light a lighted match above the burner and open shut-off valve (1) 1/4 turn to left.
3. During the lighting process, a small amount of air from the tank is consumed. Maintain strong flame by pumping air into the fount (4) as required. (CAUTION: Hold stove firmly on level surface while pumping.)
4. After stove has been burning 1-2 minutes and the flame is blue, open shut-off valve (1) wide. Flame may be adjusted by turning cleaner-regulator lever (3).

TO TURN STOVE OFF

Turn shut-off valve wheel (1) to the right until closed.

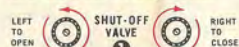

THE HIKERS' FRIEND

Slip a light 30-inch webbing strap (or strong cord) through the three loops provided on the cook kit 501-960. It can be hung securely on the outside of your pack or on your belt, with the stove in it. This gives a neat pack containing stove and utensils.



GENERAL SUGGESTIONS

KEEP BURNER CLEAN. An obstruction such as a burned match head near the burner ports will produce a yellow flame at that point.

THE PUMP PLUNGER not only pumps air into the tank but acts as a wrench to turn the air stem. Turned to the left, it opens the air stem so air may be forced through check valve. Turned to the right, the air stem closes the check valve and provides a positive shutoff. Air pressure may be added while the stove is burning. (2) The leather, occasionally for top efficiency.

KEEP TANK CLEAN by rinsing it occasionally with clean fuel.

BEFORE STORING STOVE, clean the entire stove—burner, tank, case—and it will give you years of dependable service.

THE STOVE GENERATOR changes liquid fuel to a vapor. Eventually it may fill with carbon, so no fuel can be forced through it. Avoid problems by keeping a spare generator No. 502-5881 on hand.

THE GASKET in filter cap may deteriorate with age. It might be well to install a new No. 220-6361 gasket and disc assembly occasionally.

VALVE PACKING NUTS should be checked for tightness each season before being put into service. To be sure that there is no evidence of leaks, and that there is a medium drag on valve stem.

CONTACT YOUR DEALER for service assistance or parts for your stove. (In case The Coleman Co., Inc., is notified that your stove is No. 502-700.)

DESIGNED FOR hot meals and coffee. Heat for duck blinds, ice fishing, pack trips, picnics, emergency use, etc. Excellent companion burner to Coleman[®] fuel.